





Installation


1. Make sure your headrest is removable and is height adjustable. Remove headrest from seat.

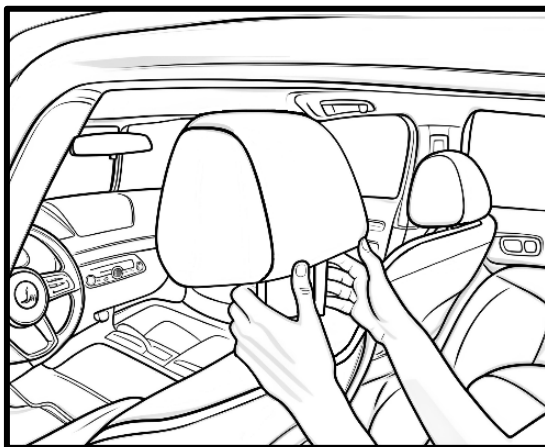



2. Wrap the elastic cord around the headrest supports making sure Roll Tuff is facing the correct position. Roll Tuff should unroll down, fabric side up. If it unrolls down and the rubber backing is showing, remove Roll Tuff and reinstall in the correct position.

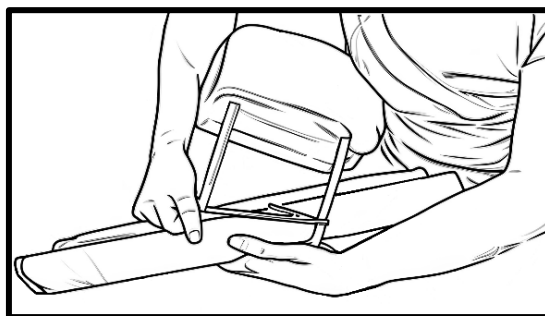

3. Reinstall the headrest making sure Roll Tuff is fully seated under the headrest.

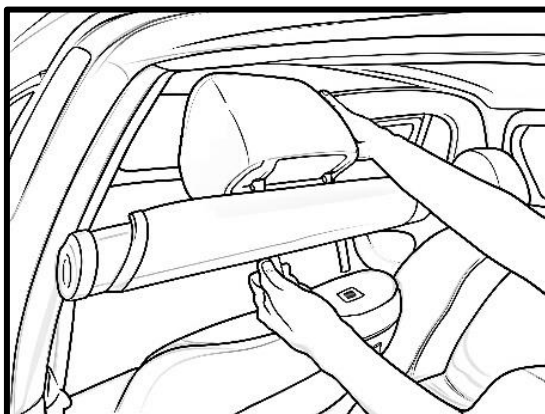

Allow enough space between the top of the seat and the bottom of the headrest for Roll Tuff to coil into. If Roll Tuff is not fully coiled it may unroll while driving.

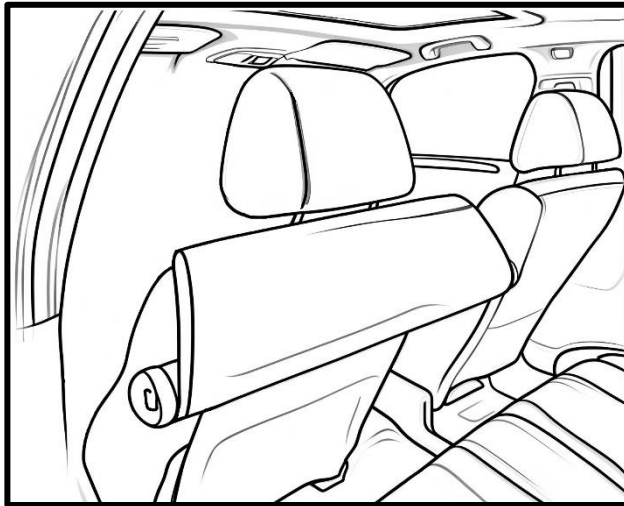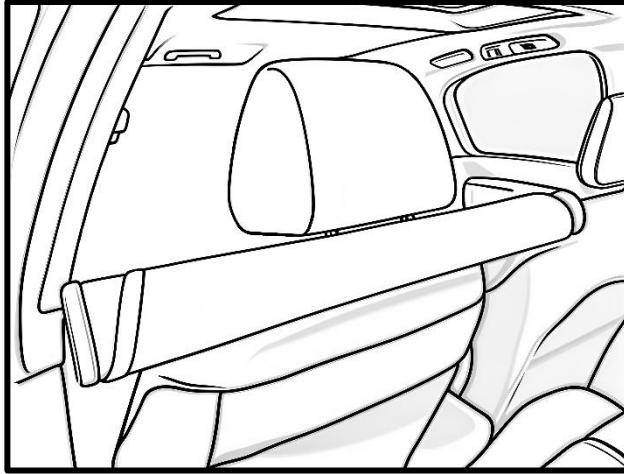

Scan or visit www.RollTuff.com for additional use and care information.



Assembled in the USA

Patent Pending

ONYSZ LLC


How to use Roll Tuff

Unroll

1. Rotate around the headrest from the back to the front and center in the middle of the seat. Unroll with one hand and use your other hand to push down on the end of the internal banding until you hear a "pop". The end of the internal band should stay straight and not coil.



2. Keep unrolling and use one hand to keep Roll Tuff at the seat junction (where the seat back meets the seat bottom). Push down on the end of the banding near the seat junction until you hear a "pop".

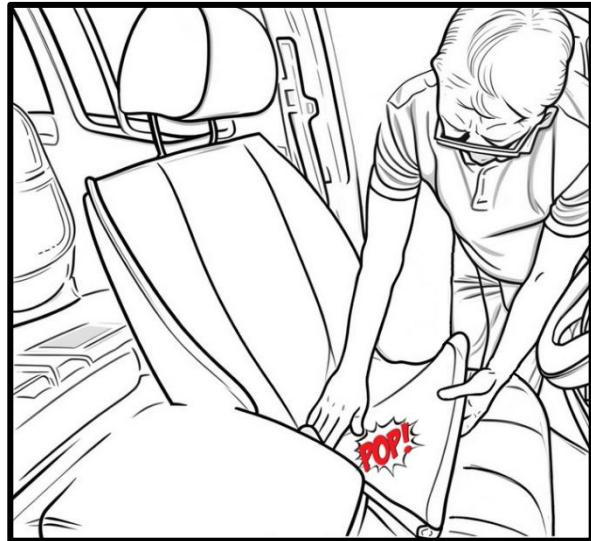


3. While keeping your hand in the seat junction use your other hand to fully unroll the seat bottom portion. Fully extend and use your thumb to push down on the end while your fingers pull up until you hear a "pop". After sitting on your seat cover the front edge of the banding may snap back down. This is normal during use.



Roll Back Up

1. Make sure the internal band is fully extended on the seat bottom portion. Roll the front hanging fabric under and curl the end of the banding until you hear a "pop" sound. Make sure to roll the front fabric under before popping the end of the internal banding.

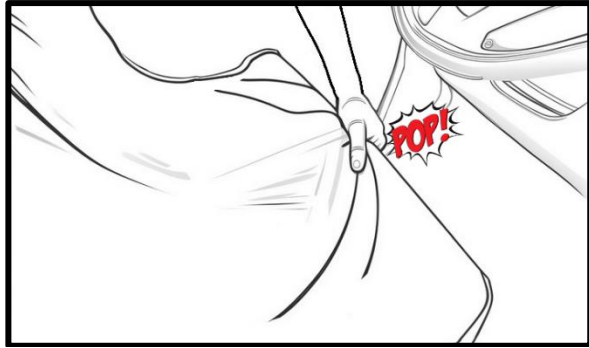

2. Continue to roll the fabric toward the seat junction. Make sure the internal banding rolls over itself so the roll of fabric does not roll up uneven. Use both hands to roll the fabric up to the second internal band. Keep rolling and use one hand to "pop" the end of the banding, continuing to roll to the top of the seat.



3. Flip Roll Tuff around the headrest to the back of the seat.

